

# Product data sheet

Rocker with lens and arrow symbols for KNX push-button 1-gang



## Reference number

LC 101 KO5P 207

## 1-gang rocker with lens and arrow symbols

for JUNG HOME push-button 1-gang, battery-powered, ref.-no.: BT LS CD 1001  
for KNX push-button 1-gang ref.-no.: LS CD 1071 1ST, LS CD 1091 1ST

**matt lacquered**

**Colour::**  
outramer moyen

**Material:**  
duroplastic lacquered