

Product data sheet

Rocker with arrow symbols for KNX push-button 2-gang



Reference number
CD 102 P BR
2-gang rocker with arrow symbols for KNX push-button 2-gang ref.-no.: LS CD 1072 1ST, LS CD 1092 1ST, LS CD 1092 1TE Duroplastic (scratch-proof) glossy Colour: brown Material: duroplastic